

## Warranty Information

Xyron, Inc. warrants that the Xyron® 9" Creative Station™ is free from defects in material and workmanship for a period of one (1) year from the date of purchase. Xyron, Inc. will repair or replace a defective product or part without charge, provided it is returned to the address below, freight prepaid with proof of purchase. If the product is damaged by neglect or misuse, the warranty is null and void.

To register your product online, please go to [www.xyron.com](http://www.xyron.com) and click on the product registration tab. **If you register online, we will send you a free inspirational DVD full of great ideas!**

## Customer Service

We want you to be happy with your purchase of a Xyron product. If for any reason you have a problem or a question, we would like to hear from you before you consider returning it to the store where you bought it. In many cases, we will be able to solve your problem or answer your question right over the phone; so please contact Xyron Customer Service toll-free at **1-800-793-3523** or **1-480-443-9419** for help. You can also e-mail us at: [customerservice@xyron.com](mailto:customerservice@xyron.com)

### For customer service outside of the U.S.

Australia: 61 2 8899 8500; [australiacustomers@esselte.com](mailto:australiacustomers@esselte.com)  
New Zealand: 64 9 272 1600; [nzcustomers@esselte.com](mailto:nzcustomers@esselte.com)

The purchase or acquisition of this product does not confer the right or license to use the machine and cartridges in the retroreflective field or to make or sell machines or cartridges for use in the retroreflective field. U.S. patent numbers 5580417, 5735998, 5961779, 6244322, 6270612, 6602376, 6660120, 6672354, 6675854, 6698487, 6742428, 6810935, 6814693, 6832639, 6840298, 6843296, 7087280. Other U.S. and foreign patents pending.

©2007 Xyron, Inc.  
7400 East Tierra Buena Lane  
Scottsdale, AZ 85260 USA

Visit [www.xyron.com](http://www.xyron.com) for more information and great project ideas

Part# 5720\_RevA

An  Company

 **XYRON**®

## 9" Creative Station™ User Guide

The Xyron 9" Creative Station is a Sticker Maker, Laminator, Label and Magnet Maker all in one. Perfect for so many of your craft, school, home and office projects, it's even safe enough for kids to use, requiring no heat, batteries or electricity. The 9" width allows you to create photo stickers, photo magnets, laminated recipe cards, business cards, labels for jars and cabinets and many other projects.



### Refill Cartridges Available\*



**Permanent Adhesive**  
Strongest hold  
For difficult surfaces

**Perfect for:**

Photos, paper crafts, scrapbooking and card making, school and home projects, home décor, vellum, rubber stamping, and fabric, ribbon, metal and other 3-dimensional items



**Repositionable Adhesive**  
Reposition multiple times  
Best on smooth surfaces  
Stick it. Unstick it. Restick it.  
Safe for windows, painted walls and doors, and it does not leave a residue on most surfaces. Test in an inconspicuous area first.

**Perfect for:**

Kid's stickers, paper crafts, scrapbooking and card making, school and home projects, stenciling, vellum, games and photos



**Two-Sided Laminate**  
Preserve and protect documents  
Allows you to cut right to the edge or completely through the item you are protecting. It will not separate!

**Perfect for:**

 
Photos, ID's, recipe cards, kid's artwork, memorabilia, newspaper clippings, bookmarks, business cards and tags



**Matte Laminate/  
Permanent Adhesive**  
Preserve and protect documents with a Matte Laminate finish on the top and Permanent Adhesive on the bottom

**Perfect for:**

Photos, paper crafts, scrapbooking, card making, memorabilia, classroom aids, food jar and packaging labels, displays, signs, banners and labels



**Laminate/Magnet**  
Create magnets with a Laminate finish

**Perfect for:**

Photos, business cards, frames, school and home projects, shopping and To-Do lists

\*Refill Cartridges sold separately

# Features & Functions

**Patented Easy Loading Cartridge:**  
Allows you to change from adhesive to laminate to magnet in just seconds.



**The Input Tray:** Used to feed items into tray.

**Handle:** Advances items through the machine when turned clockwise.

**The Built-in Grip/Carry Handle:**  
Take your machine almost anywhere.



**Removable Cutter:** Gives you the freedom to trim your document both in and out of the machine. Use it for anything you need to take the edge off!

## Unloading & Loading



### Unloading

1. Open cartridge compartment by lifting up on latch.



2. Gently pull cartridge up and out of machine.



### Loading

1. Open lid. Slide cartridge into tracks on machine sides with exposed rolls of material facing open lid cover. Close lid securely. Advance film and trim.

## Replace the Cut Tray & Cut Blade



### Cut Tray

1. Align cut tray sides with the machine. Slide in the cut tray with the cut bar resting on the spring arms on the side of the machine until it snaps and locks into place.



### Cut Blade

1. Loosen and remove the screw in the cut bar with wrench. Remove colored plastic insert and slide the old blade off cut bar (safely discard old blade).



2. Carefully slide new blade onto cut bar. Note: Sharp edge of blade should be facing inward. Replace the colored plastic insert and secure with wrench.

## Helpful Hints

- For best results, turn the handle slowly.
- Burnish or rub around your adhesive items well before removing the top film.
- Arrange small items (without overlapping them) on the feed tray to maximize your cartridge material use.
- Use items that are .10" thickness or less.
- If there is excess adhesive around edges of an item, simply wipe off with your fingers.
- Fabric Tips:
  - Works well with most fabrics that do not have sizing
  - For items that will be washed, stitch after adhering
  - For best results, use Acid-Free Permanent Adhesive
- If machine rollers pick up adhesive after use, clean with isopropanol alcohol.
- Store your machine and cartridge between 40°F and 70°F
- To prevent curling on adhesive, remove the clear top mask first. Then lay your document upside down to remove the backing from the sticky side.
- Great to apply adhesive to your document before cutting on the Xyron® Wishblade®. Visit [www.xyron.com](http://www.xyron.com) for more information.

## Basic Operation as easy as 1-2-3!



### Step One

Place item on feed tray.



### Step Two

Guide item forward while slowly turning knob clockwise until your item comes out of the back of the machine.



### Step Three

Press down on cut blade and slide to the left or right to cut. Note: For a smooth cut, place your finger all the way back to the back of the cut blade holder. Remember to burnish or rub well on adhesive items before removing film.